


NISSAN SR20 HI-TORQUE MOTOR MOUNT SET

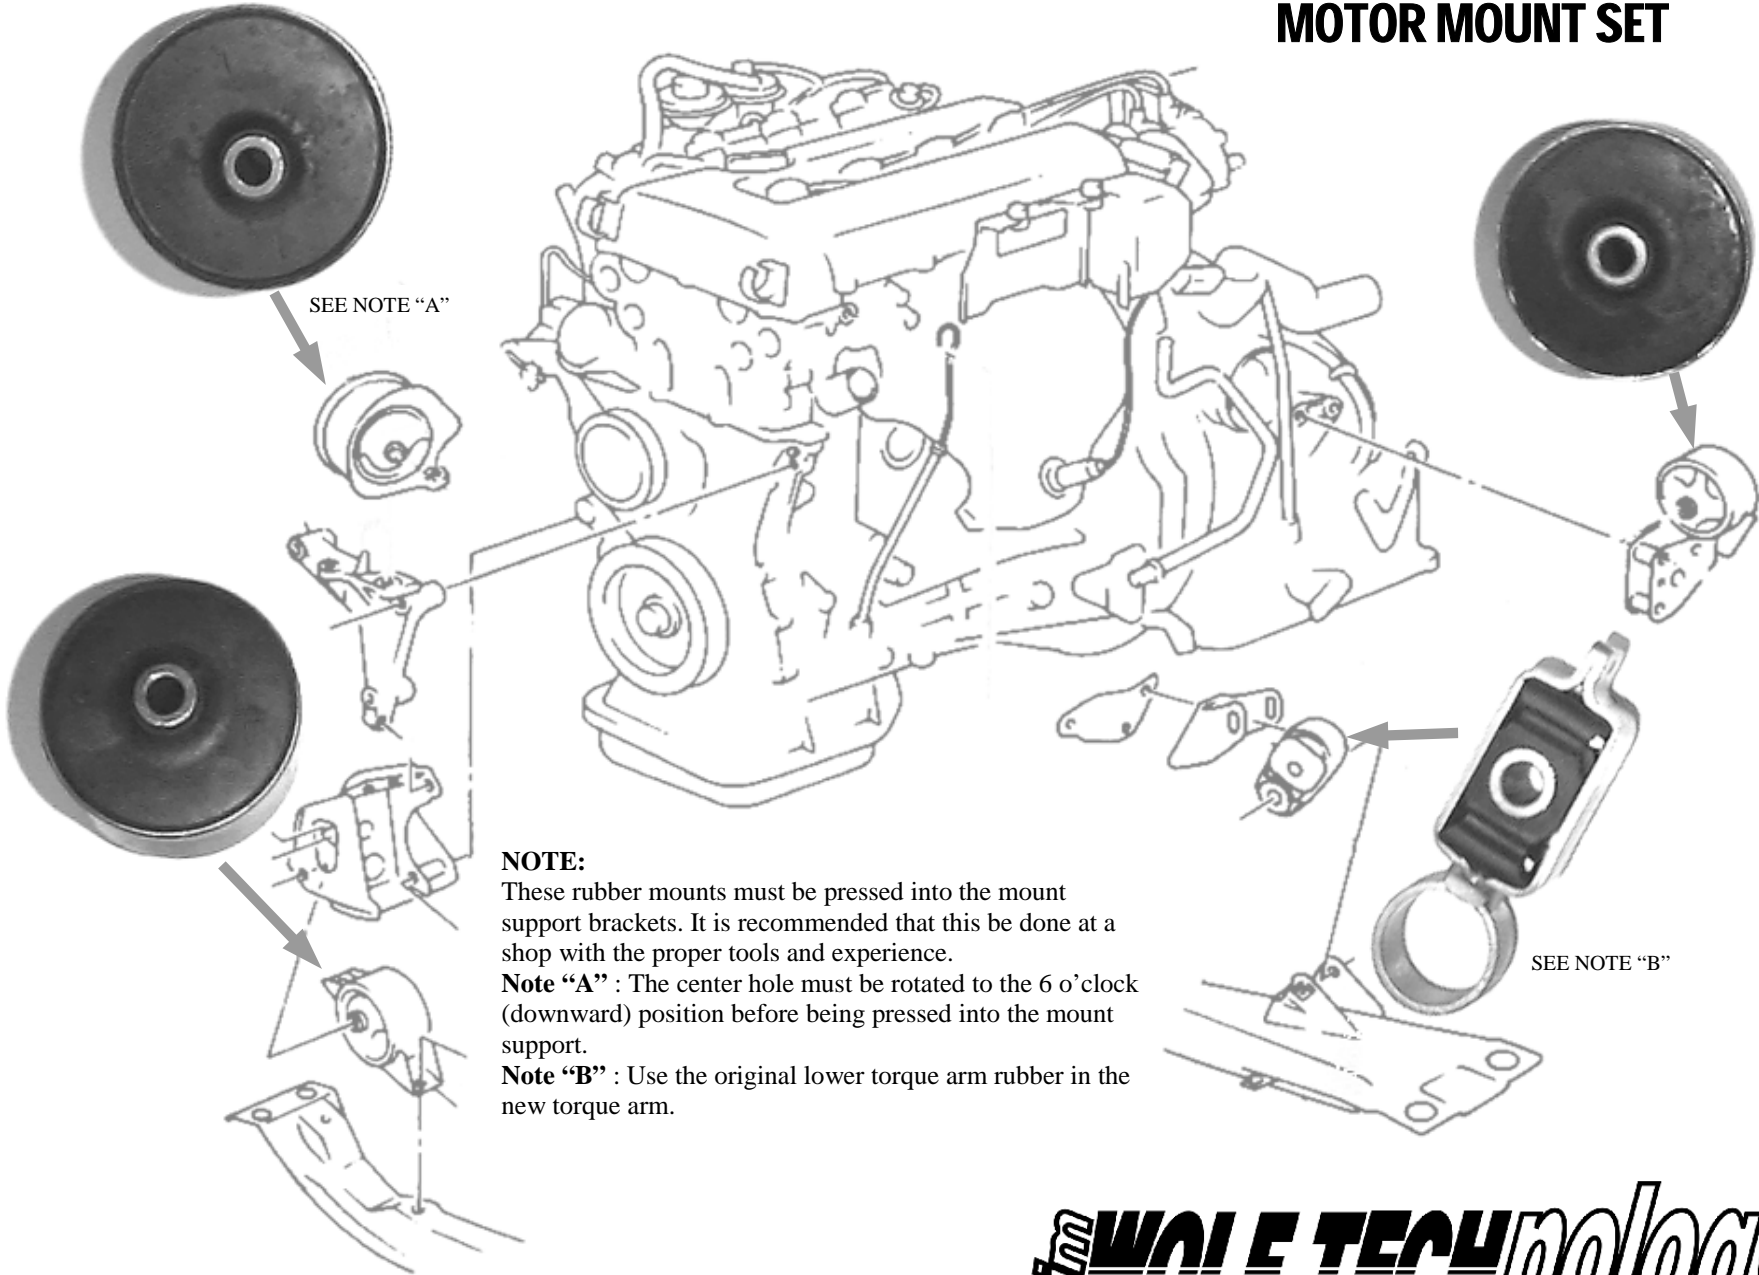

NOTE:
These rubber mounts must be pressed into the mount support brackets. It is recommended that this be done at a shop with the proper tools and experience.
Note "A" : The center hole must be rotated to the 6 o'clock (downward) position before being pressed into the mount support.
Note "B" : Use the original lower torque arm rubber in the new torque arm.